

# Social Booth Settings - Video

Modified on: Mon, 14 Mar, 2016 at 1:43 PM

**1 Enable Video**

**2 DSLR**  **Webcam**  **Current** Logitech HD Pro Webcam C920

Set camera to video mode with SD card  
T3i, T4i, T5i & SL1 only

**3 Seconds**

**4 Enable Video Overlay**

**5 Overlay Image**

Width	Height	Left	Top
0	0	0	0

**6 Video only Mode**

**7 Ask for Video after Photo session**

**8 Question**

**9 Enable Slomo**   
Set camera to 60fps

**10 Speed**  1/2  1/3  1/4

(<http://imgur.com/cXnuKG>)

- 1. Enable Video**  
Allow the user to select to record short video clips.
- 2. Video Camera Selection**  
Select DSLR or Webcam to record video.

*Note: DSLR video will only work with select Canon Camera which are listed right under the DSLR selection button.*

3. **Seconds**  
The number of seconds of video to record.
4. **Enable Video Overlay**  
Add an overlay to the video. This will need to be a 600x400 PNG-24. If you design smaller you will need to set the size and placement here.
5. **Overlay Image**  
Select the image file you want to overlay the video.
6. **Video Only Mode**  
Checking this will turn Social Booth into a Video only Booth, disabling Photo Mode.
7. **Ask for Video after Photo Session**  
Enables a pop up question at the end of each photo session asking if they want to record a video too.
8. **Question**  
Change the wording of the question pop up asking for a video after the photo session.
9. **Enable Slow Mo (DSLR Cameras Only)**  
Enable the slow motion processing of each video session.
10. **Speed**  
Choose the slow motion speed of the video processing.

*Note: Slower computers don't perform well recording video. Processing times can be quite slow and audio frequently can get out of sync with an underpowered PC*

*Note: Video can be uploaded to Facebook and Twitter as well as Emailed. Video can't be sent via SMS and SMS will be disabled when the user selects a video.*